


HOW TO REPLACE DRUM (IMAGING UNIT) CHIP FOR XEROX PRINTER



1. take the imaging unit out of the printer, using paper town or soft cloth to cover the imaging unit, this is very important you don't want the drum part get scratch and to exposed to the light more than 5 minutes. it will decrease the quality of print if the imaging unit exposed to the light for long time.

2. locale the chip,

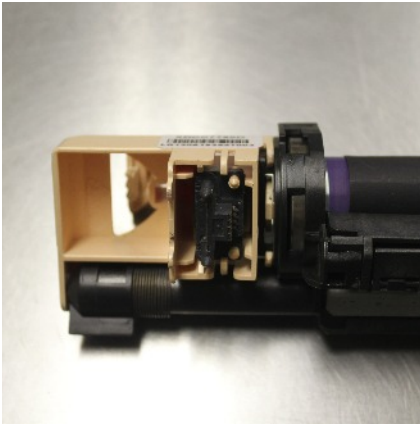

3. take the chip out and replace it with the new chip

